
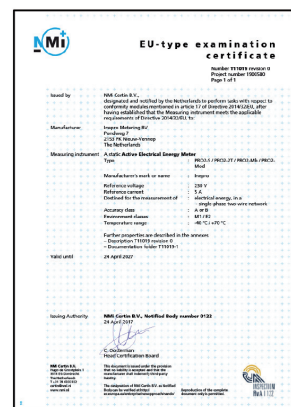
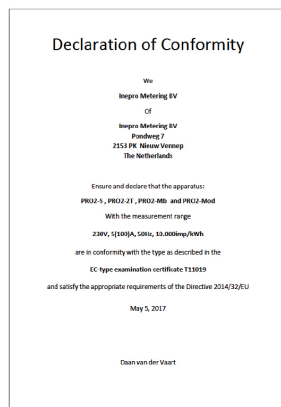


Changing the Modbus address by using the touch panel keys on the meter

The Modbus address can be changed from the Program Menu (see supplementary sheet) under "PRO – 2."

Additional changes are possible. A password is required to access the sub-menu "PRO – 3." The default

password is "0000" – it can be changed via the programming.

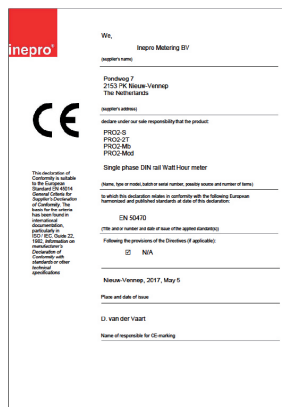

Attention

Measurement for billing purpose only with MIDconfirmed meters.

Example for MID-labeling:



For further requests regarding Solar-Log™, or meter configuration inside Solar-Log™ please consider:

info@solar-log.com

or: +49 (0)7428/4089-300

For further requests regarding the PRO meter please consider:

info@kdk-dornscheidt.com

or: 02244 / 919940

Quick Start Guide

Solar-Log™ PRO2
Electronic single-phase energy meter for DIN-railmount
with MID–confirmation.



Please note

This document is only a quick reference guide and does not handle every function. The complete users guide is available at: www.kdk-dornscheidt.de

Information for your safety

This quick start guide does not contain all of the safety instructions for operating the meter. Due to special operating conditions and/or local laws and regulations, additional measures may be required.

Trained Personnel

The meter may only be installed and connected by a trained, qualified specialist. Trained, qualified specialists are those who are certified to put devices, systems and circuits into operation, to switch them on, to ground them and to mark them according to safety standards and regulations.




Attention

Case is sealed, do not open the meter! No warranty if case is opened or seal is removed.

Dimensions (mm)

Width: 35,8 mm
Height with cover: 141,5 mm
Height without cover: 92,5 mm
Depth: 63,0 mm

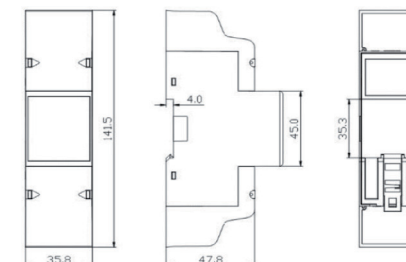

Meter type: Solar-Log™ PRO2

Technical data

Nominal voltage	230 V AC	
Current	5 (100) A	
Frequency	50 Hz ± 10 %	
Measurement	Active- and Reactive energy in forward and reverse direction	
Accuracy class	B	
Power consumption	≤ 10VA/Phase - ≤ 2W/Phase	
Width	2 TE (35,8 mm)	
Pulse Output LED	10 000 Imp/kWh	
S ₀ -pulse output:	1 000 Imp/kWh, 31ms	
Temperature range	-40°C to +70°C	
Max. rel. humidity	75 % average, 95 % short term	
Registered harmonics:	0,05 – 0,25 kHz	
LED blinking red	Consumption >4W, pulsrate= consumption	
Display	5 + 2 Digits (99.999,11 kWh)	
Max diameter	Mainclamps:	max. 35 mm ²
	Additional clamps:	max. 2,5 mm ²
Baud rate ModBus	9,600 baud	

Connection diagramm

Connection diagramm 1000 (DIN 43856)

Clamp 1	Input Phase „L1“
Clamp 3	Output Phase „L1“
Clamp 4	Neutral connection N (Input)
Clamp 6	Neutral connection N
Clamp 10, 11	ModBus-Connection
Clamp 12, 13	(Unallocated)
Clamp 18, 19	S ₀ - pulse output „Forward“
Clamp 20, 21	S ₀ - pulse output „Reverse“

Connection diagram for different operating modes

Solar-Log™ PRO2 (RS485 oder S₀) connection assignments

The meter connections are labeled IN (bottom) and OUT (bottom).

As consumption or sub-consumption meter: Connection to the grid (IN) – connection for appliances (OUT)


As inverter /production meter: Connection for the production (IN) – connection to the grid (OUT)

Solar-Log™ PRO2 connection assignments (only RS485)

As battery meter (bi-directional): IN = connection to the grid – OUT = connection to the battery

Please note that only Solar-Log™ PRO2-Mod meters can operate on the RS485 interface (one or several). It is not possible to combine the operation with other components.

Terminal block connector Solar-Log™ (RS485)	Solar-Log Base	PRO2
Terminal	Terminal	Terminal
1 ->	(A) 6 or (B) 10 (Data+)	10 (A)
4 ->	(A) 9 or (B) 13 (Data-)	11 (B)

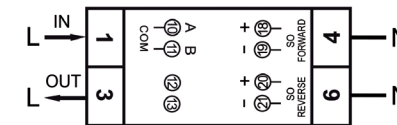

If the meter is the last device on the bus, it has to be terminated at connection block 10 and 11 with a resistor (120 ohm / 0.25W).

All display values of the meter

Change the meter from the automatically rotating display to the manual display by pressing the keys.

Pressing on the keys here allows all of the available display values to be accessed in sequence. Please refer to the attached table for the menu navigation. If no keys are pressed after a short time, the meter reverts back to the automatic display mode.